


# Instructions: Turbo Thruster Float Tube Fins

Put your Turbo Thruster Float Tube Fins on before you enter your float tube.

First unclip the heel straps. Locate one of the side-release clips **(A)** on either side of the fins. Press hard on the buttons on the top and bottom and pull the strap clip back out.

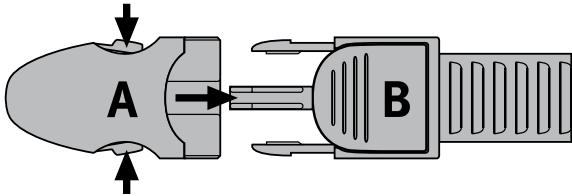

Adjust the heel strap by pushing the button **(B)** on the side of the buckles and pulling the strap into place. When properly fitted the strap should be snug to your foot with the raised part of the strap centered behind your heel.

Walk a few steps first and **be sure that your fins are on tight and that all-the side-release clips are locked.**

## Warranty

Your float tube is factory warranted by Classic Accessories, Inc. for workmanship and materials for one year from the date of purchase.



WE COVER YOUR GEAR™

Classic Accessories, Inc.  
Kent, WA, USA 98032  
[www.classicaccessories.com](http://www.classicaccessories.com)

©2007

63227

07cF59\_012